





# divar 55



Skizze	Art.Nr.	Benennung	description
1	390 1802 012		
2	0109 1106	Sechskantstiftschlüssel	hexagon stud wrench
3	390 1802 013		
4	390 1802 014		
5	390 1802 015		
6	390 1802 016		
7	390 1802 017		
8	390 1802 018		
9	390 1802 019		
10	390 1802 020		
11	390 1802 021		
12	390 1802 022		
13	390 1802 023		
14	390 1802 024		
15	390 1802 025		
16	390 1802 026	Schalter	switch
17	390 1802 027		
18	390 1802 028	Schaltknopf	switch button
19	390 1802 029		
20	390 1802 030	Feder	reset spring
21	390 1802 031	Feder	locking button spring
22	390 1802 032		
23	390 1802 033		
24	390 1802 034	Kohlebürsten (Satz = 2 Stück)	carbon brushes (set = 2 pcs.)
25	390 1802 035		
26	390 1802 036		
27	390 1802 037		
28	390 1802 038		
29	390 1802 039		
30	390 1802 040	Sperrhebel	shaft locking part
31	390 1802 041		
32	390 1802 042	Arretierstift	lock pin
33	0209 1224	Zylinderschraube	head screw
34	390 1802 043		
35	390 1802 044		
36	390 1802 045	Feder	spring
37	390 1802 046		
38	390 1802 047		
39	390 1802 048		
40	390 1802 049		
41	390 1802 050		
42	390 1802 051		
43	390 1802 052		
44	390 1802 053		
45	390 1802 054		
46	390 1802 055		
47	390 1802 056		
48	390 1802 057		
49	390 1802 058		
50	390 1802 059	Feder	spring
51	390 1802 060	Federhalter	spring holder
52	390 1802 061	Spaltkeilhalter	ripping knife holder
53	390 1802 062	Spaltkeil	ripping knife
54	0209 1236	Zylinderschraube	head screw

# divar 55



Skizze	Art.Nr.	Benennung	description
55	390 1802 063		
56	390 1802 064	Absaugstutzen	dust connector
57	390 1802 065	Gehäuseabdeckung	frame cover
58	390 1802 066	Schraube	screw
59	0279 9133	Senkschraube	countersunk screw
60	390 1802 067	äußerer Sägeblattflansch	outer sawblade flange
61	390 1802 068	innerer Sägeblattflansch	inner sawblade flange
62	390 1802 069	Bundschraube	screw
63	390 1802 070	Feder	spring
64	390 1802 071	Verbindungsstange	connecting rod - riving knife
65	390 1802 072		
66	390 1802 073	Zeiger	pointer
67	390 1802 074		
68	390 1802 075	Lenker	guider
69	390 1802 076	Skala	depth scale
70	390 1802 077	Druckteil	pressing part
71	390 1802 078	Drehgriff	knob
72	390 1802 079		
73	0201 2504	Scheibe	washer
74	390 1802 080	Drehknopf	knob
75	0209 1236	Zylinderschraube	head screw
76	390 1802 081	Verstellknopf	knob
77	390 1802 082	linkes Schwenkteil	left tilting guider
78	390 1802 083	Bodenplatte	bottom plate
79	390 1802 084	rechtes Schwenkteil	right tilting guider
80	390 1802 085		
<b>Schiene / Rail</b>			
1	390 1802 086	Gummileiste	bottom rubber strip
2	390 1802 087	Schaumstoffstreifen	bottom rubber foam strip
3	390 1802 088	Aluprofil	alu profile
4	390 1802 089	Kunststoffstreifen	top plastic strip